

Triangular Inserts

Dwg. SA8.0.1.50


Quantity:

- 1 x 59 mm long, straight ends
- 1 x 62 mm long, straight ends
- 2 x 114 mm long, straight ends
- 2 x 343 mm long, straight ends


Model SA8
Version 1.0
2018-April 20

20 x 20 x 3mm Angle Iron
Grind the corners off
Weld onto 1.6mm steel
Cut it flush to make a triangle.


C Pemberton-Pigott

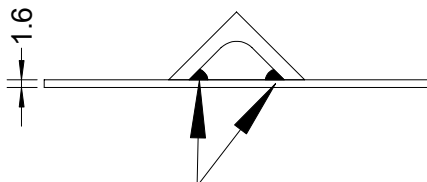

Weld inside
and outside

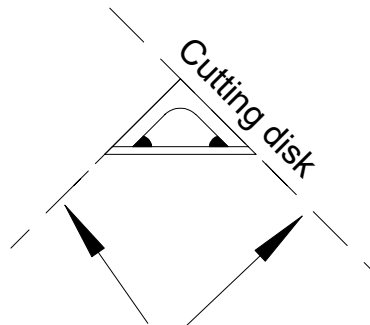

Cut near the joint
and grind flat

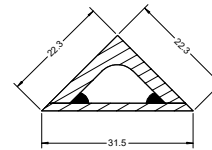

Making inserts